

UNT Space Heater Information

Before purchasing a space heater contact Facilities (565-2700), have them check your area to make it more comfortable.

Requirements


1. 1500 Watts max.
2. Electric only
3. **Tip over cut – off protection***
4. Purchase a heater with the seal of an independent testing laboratory.
5. Must be inspected and approved by the UNT RMS Fire Safety Office.

USE

1. Must be plugged into the wall. Cannot be plugged into an extension cord of any kind.
2. Must not be operated under or near flammable materials. This means you cannot operate it under a desk.
3. Place the heater on a solid, flat surface.
4. Keep space heaters out of the way of foot traffic. Never block an exit.
5. Should be turned off and unplugged when you leave the room.

*** You will find heaters that say safety cut-off or over heat cut-off. This does not necessarily meet the criteria. It must be a tip over safety feature.**

Any questions contact the UNT Fire Safety Office at 565-8104.

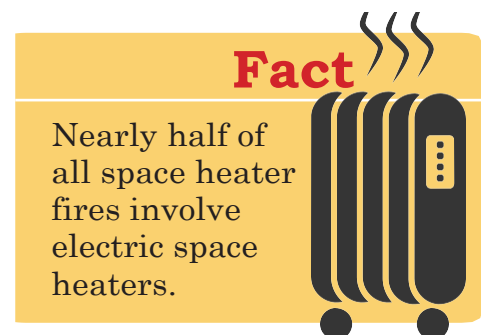

***UNIVERSITY RISK MANAGEMENT PROGRAM POLICY (15.012)**